User Manual

Entertainment

Play Game

Study Assistant

Travel Companion

VIDEO GLASSES

Contents

..... 1
.....2
dia player.....2
..... 4
.....5
.....5
.....6
.....7
.....7
.....8
.....9
.....9
.....10
.....11
.....11
olutions.....11
.....13

Foreword

Thanks for use our High-tech product, Please study this manual carefully before you use this unit, which can give you great help about it's specification, function and right method.

We are sorry for any mistake of printing or translation in this manual, and any correction for mistake without any other notice in future

Declaration: The copyright of this manual is qualified by factory No copy, No republication!

1) Main function

Support AV in function, It can connect to any products with AV/TV out function, such as VCD, DVD, TV, MP4, PMP, VCR, Video recorder, 3G-MOBILE, X-BOX, etc.

Support RM, RMVB(Resolution :1280*720, 4MB code stream) AVI、FLV、MP4、MPEG、DAT、3GP、WMV、VOB、ASF video format.

Support JPEG format pictures and slides automatic browsing

Support SD memory card: 128M-8GB

Mode of operation: Body key operation

Language: Simplified Chinese, English, Traditional Chinese, Malay, Italian, Korean, Japanese, Spanish, Portuguese, French, German, Dutch, Turkish, Indonesian, Danish(15 species)

System Configuration: Windows Vista/Win7/XP/2000/ME Operating System

Support USB2.0 High-speed transmission

Support TXT format e-book reading and bookmark function

Support DRM9 Data Rights Management

Support firmware upgrade

2) Note

If you do not use the video glasses for long time, please turn it "OFF" to save the energy.

Please avoid it fall down or being strong collision, or the display will show abnormal or no signal.

Please do not put it in the environment of high temperature (35℃ above) or cold (-5 ℃ below).

Battery charging: please note that it need turn on the power button before charging

Please charge the battery in the following cases,

a. After turn on the unit, the display screen do not work, or the System shutdown automatically. .

b. During the working, the display screen keep always flicker.

During charging process, the charger and the player will be heated, this is normal phenomenon.

Please do not put the product in the direct light or heating source.

Please do not use the products when you are cycling, driving cars or motorcycles, it is dangerous

Please classify and deal with the packaging waste, batteries, used electronic products in proper way.

Please do not put the product in the wet environment

The information in this manual is subject to change without notice, and we do not responsible for any results which arised by mistake operation

3) Appearance and multimedia player

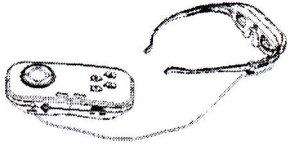

Buttons Definition:

1. Camera button
2. USB port
3. AV-IN
4. Function buttons
5. AV-OUT port
6. Earphone jack
7. Confirmation button
8. Return button
9. ON/OFF
10. Game Playing control buttons
11. SD card socket

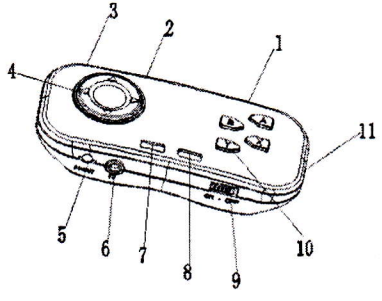

4) Basic Operation

Turn On:

Please connect glasses to the multimedia player by AV-OUT port firstly,

Then turn "ON" the power button and short press the ▶II button, then indicator light shows blue, the video glasses enter to the main menu.

The waiting time for restart the video glasses should be 3 seconds gap after former turning off.

Turn off:

a. Press the ▶II button, then Turn "OFF" the player, the blue light will disappear.

b. The product will be turned off automatically when power is not enough.

Power on Reset Function

Please turn off the product if any abnormal conditions during working, such as system halted, then everything is ok after reset

Computer Transmission

Connecting with computer by USB cable, then you can get the removable hard disk function to carry out data transmission in your PC

Volume adjustment

When play video or audio, Press ▲ to increase volume. Press ▼ to reduce volume

Earphone jack

Any earphone with 3.5mm is freely to use.

Fast forward /fast backward

When you play music or video, press ◄ ► for long time to make fast forward or backward

Front / Next file

In the Music, Video, Pictures, E-Book, Gaming mode, short press ◄ ► key to choose Front file or Next file

5) Menu

In the main menu interface, press ◄ ► to choose Video / Photo / E-book / Resource Manager / Record / Camera / Setting / Game, 8 options, then press confirmation button ▶II to enter into function menu.

In the menu of Setting, Resource management interface, etc., press confirmation button ▶II to enter the function, directory, or sub-menu. Press return button ⟲ to back to the previous directory or menu.

6) Video Play

Short Press ▶II button in the main menu to select program, and then press confirm button ▶II to play

Press button "B" in the index to choose "Delete", then you can delete the movie

Press ▲ to increase volume, press ▼ to reduce volume, press ◄ ► button short time to move Front file or Next file,

Press ◄ ► button long time to make fast forward or fast backward for the movie

Press ▶II to pause when playing video.

Press ⟲ to return to the previous directory or menu

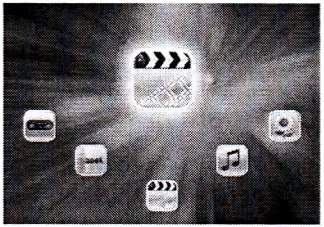

7) Photo Browser

Press confirmation button ▶II to enter Picture mode
Short Press button ▲▼ in the index to select program, then press ▶II to browse.
When watch the picture, Press ▲ to zoom in the picture, ▼ to zoom out picture,
Press button "B" in the playing mode to enter the sub-menu:"Slid", "Delete Photo" , "Photo information" , "Exit" menu, then you can presss ▶II to enter the menu.
Press ⟲ to return to the previous paragraph directory or menu.

8) E-Book

Press confirmation button ▶II to enter e-book mode
Presss button "B" in the index to choose "Delete" , then you can delete what you do not need.
Press ▲▼ in the index to select program, and then press ▶II to read.
Press ▲▼ to choose Front page or Next page.
Presss button "B" in the reading mode to enter the Sub-menu: "New bookmark" , "Bookmark list" , "Return" , then you can press ▶II to enter the menu.
Press button ⟲ to back to the previous directory or menu

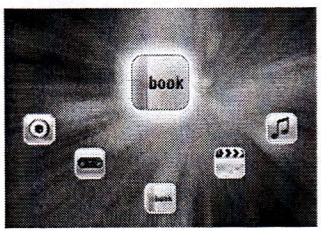

9) Resource Manager

You can check the all the files in this menu
You can play all the files in this menu
SD card:
After you insert SD card into media player, Then operate it as following steps:
Setting----- Memory-----SD----Working space----succeed
In this resource Manage, Then you also can find the files which in SD card

Please note that You can't delete any document in the Resource Manager, just can delete them in the corresponding menu.
Press button ⟲ to back to the previous directory or menu

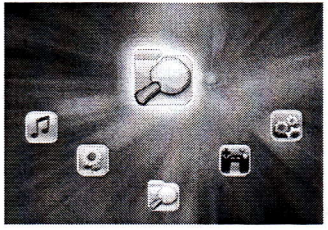

10) Record Mode

Press confirmation button ▶II to enter record mode
Press confirm button ▶II to start recording, and press again to stop recording, Then press ▶II to listen to the recorded.
You aslo can find the recorded document in the "ARECORD" in the Resource Manager menu.
Please note that the only way you can delete the recorded document is that connectting to PC to delete it
Press button ⟲ to back to the previous directory or menu

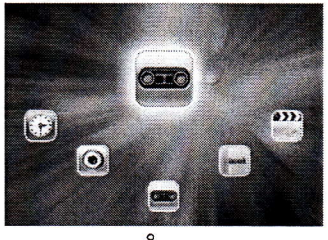

11).Camera mode

Press confirmation button ▶II to enter camera mode
Press camera button to start camera or press the confirm button ▶II to photograph
Please check the pictures in the "Photo" menu. and press button "B" to enter sub-menu: "Slid", "Delete Photo", "Photo information", 'Exit' menu, presss ▶II to enter the menu.
Press ⟲ to return to the previous directory or menu.

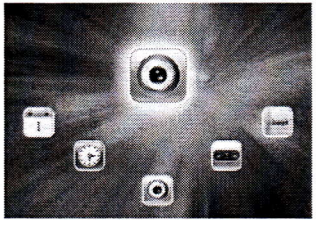

12) Setting mode

Press confirmation button ▶II to enter into setting mode.
Press button ▲▼ to select sub-menu: "Language setting","TV setting","Memory","System default setting".
Press ▶II to enter the third stage menu and press ▶II to confirm what your choose, then press ⟲ to return.
Language setting:
Press ▲▼ to choose the language which you need , press ▶II to confirm it, then press ⟲ to return.

Memory:

Press▲▼ to choose "Flash" or "SD card",press ▶II to confirm it, then press ⏻ to return.

System default setting:

Press▲▼ to choose "YES" or "NO", press ▶II to confirm it, then press ⏻ to return.

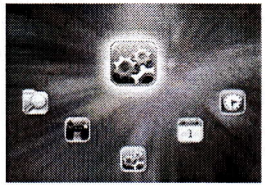

13) Game mode

Press confirmation button ▶II to enter into game mode.

Short Press ▲▼ button to select the game, press confirmation button ▶II to enter the selected game.

Buttons ▲▼, ◀ ▶ is direction keys in the game mode.

Press confirm button ▶II to start or pause.

Four buttons "A","B","X","Y" in the right area of mediaplayer are the keys for game action.

Press ⏻ and choose confirm, to return to the previous directory or menu.

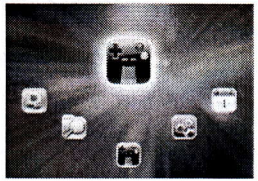

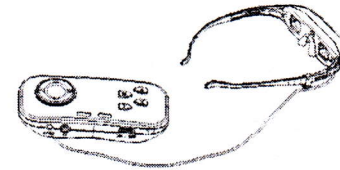

14).USB Using

Please turn "ON" the multimedia player before operation.

The video glasses with high-speed USB2.0 interface and standard removable disk function, It support Windows98 (need to install the driver program by this system), Windows2000/XP/win7/Vista systems (no need to install the driver program). After connection with PC (should press the power to "ON"), then you can find the "Removable Disk" to read in "My Computer"

15).Charging

You can use the adapter to make charge for battery or use usb cable to make charge with the media player charging, it will take about 4 hours to make full charge (Please note that the beginning 2 times must be charged for 8 hours), The light will be in red color when in charging, after fully charge, the red light will be weak or flicker,

Manager the power

When the media player stand by, it will off in 3minuts, please restart the media player

16).Common problems and solutions

A: Player can not work after turn on the power switch.

Re-examine the product to make sure all the connected joints well

After full charge and re-examination, if it still does not play, please contact our customer service

B: No sound

Make sure the volume is not at the lowest

Make sure the connection joint of earphone is well

Make sure the file is integrated instead of derogation

C: The button and keys without any function

Restart the mediaplayer again

D: Noise

Make sure the headphone plug is clean, because the dirt will cause noise

Make sure the file is not corrupted, otherwise please try playing other files, damaged file will cause serious noise

E: Messy code in screen

Please make sure the correct language option has been set up, Restart the media player again

F: It only can load capacity of 700MB or so, then computers indicates that the capacity is limited

This Removable Disk is in the FAT format, so format this "Removable Disk" once again with the FAT32 format, then ok

G: It can not download the file

Make sure the connection joint of the computer and the player is properly

Make sure the memory storage capacity is not exhausted

Make sure the USB cable is not damaged

H: The capacity of removable disk become smaller

Please connect player with computer first, then operate as follows:

Find a "Removable Disk" ----- Right click "Removable Disk"----- Select "Format"----Select the option □FAT32□ from the file system---- click the Start button, then implement as the prompt indication.

After the format, the capacity will be updated.

I: As for the capacity of flash memory, Why is there the difference between the practical capacity in player and mentioned in the specification?

The products need some capacity to storage driver program for itself. So the practical capacity is smaller than the nominal capability.

In the specification

17) Technical Specification:

The part of player

Connect with computer	High speed USB2.0 (FS)flash disk
Memory	Flash memory: 2GB, External SD card:1GB-8GB
Lithium battery	Max 3 hours for video playing, 1000 mAh replaceable Nokia Lithium battery
Video format	RM/RMVB (Resolution:1280*720, 4MB codestream) AVI, MPEG, 3GP, VOB , FLV
Photo format	JPG
Camera	1.3 million pixels
Game	Nes,gb,gbc,sfc,smc,smd,bin.gba, Support 32 bits games
Operation temperature	-5~35 degree
15 multi-languages	English,Malay, Italian,Korean, Japanese, Spanish etc.
Operation system	Windows2000/XP/vista/win7

Video glasses monitor

Display Size	☐QVGA 40inch (distance 2M) ☐VGA 80inch (distance 2M)
Resolution	☐320*240(QVGA) ☐640*480(VGA)
Viewing angle	35 degree
Video format	NTSC/PAL/SECAM
Audio output	Stereo earphone
AC adapter	Input 100-240V, 50-60HZ, Output 5V,1000mA
Operation temperature	-10℃ ~ 60℃
Audio / Video special port	Special interface
Can be connected to the devices	It can be connected to any devices with AV/TV-OUT function and port, such as iPod/VCD/DVD/VCR/DV/MP4/PMP/PS2 /PS3/X-BOX/Game console/3G mobile /Digital television and so on

Any changes about the product design, specification and function will not be given another notice again, Changes to the technical progress serve, we reserve the tight.